



Macintosh PowerBook 165c Keyboard Replacement

This guide will demonstrate how to replace the Macintosh PowerBook 165c Keyboard.

Written By: Adam



INTRODUCTION

Use guide to replace a worn or broken keyboard.



TOOLS:

- [T10 Torx Screwdriver](#) (1)
 - [T8 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Orient the computer so the battery is facing you.
- Slide the gray plastic battery cover to the right.

Step 2



- Pull the battery toward yourself until it is fully detached.

Step 3 — Input/Output Door



- Orient the computer right side up with the rear facing you.
- Open the Input/Output (I/O) door.

Step 4



- Carefully bend the door into an arch until one of the pins releases from its slot.
- Once one of the pins is free, remove the I/O door from the computer.

Step 5 — Lower Case



- Orient the computer with the bottom facing up and rear facing you. You should be able to read the Macintosh label in this position.

Step 6





- Use a T8 torx screwdriver to remove the 6.8mm long screw above and to the right of the modem jack.
- Twist counter clockwise to remove the screw.

Step 7




- Use a T10 torx screwdriver to remove the four, 18mm long screws from the lower case.

Step 8

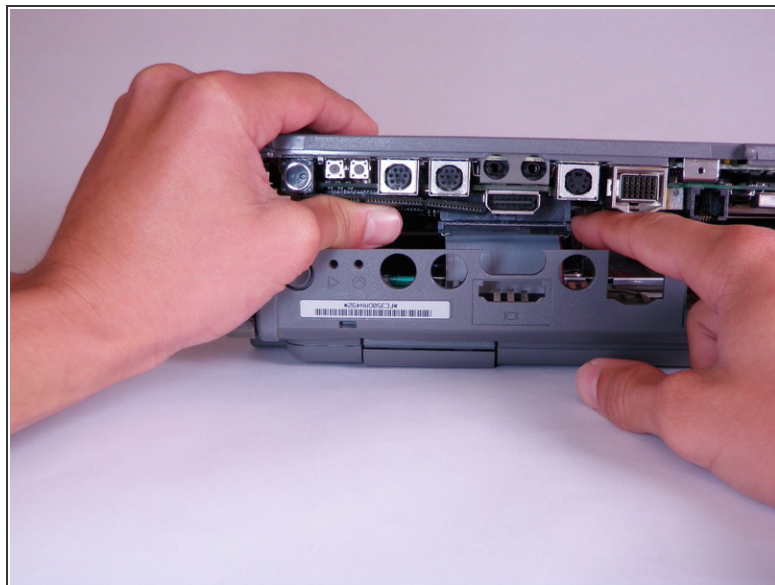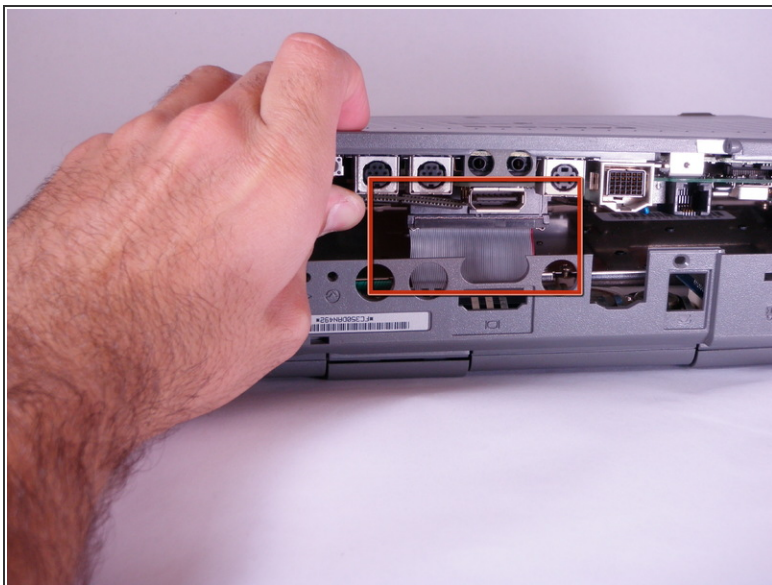



- Place your hands on the lower case, just above the I/O panel, and slowly lift the lower case a few inches above the main body of the computer.
 - Release the large, gray interconnect ribbon cable just behind the I/O panel.
- ⚠ Caution: Lower case cannot be fully removed until two plastic clips in the front corners are released. See the following step for details.

Step 9

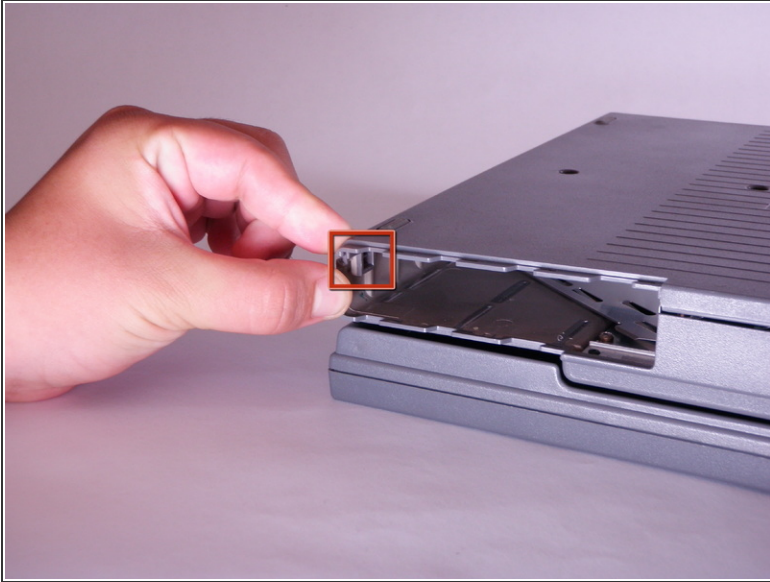


- Place your thumb on the upper case, inside the empty battery slot, and your index finger near your thumb on the left side of the lower case.
- Pinch your thumb and index finger towards each other to release the clip. Without releasing pressure on the pinch grip, use your index finger to push the lower case upwards.
- Lift the lower case to remove it.

Step 10 — Trackball

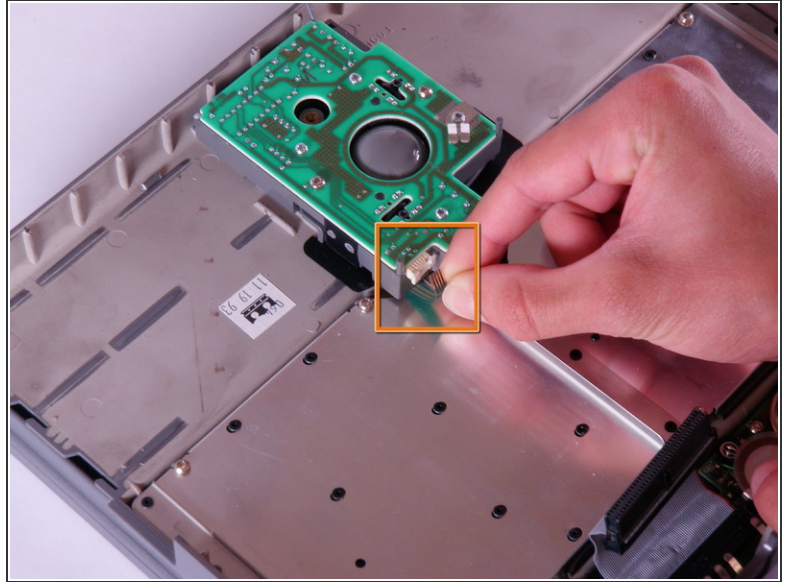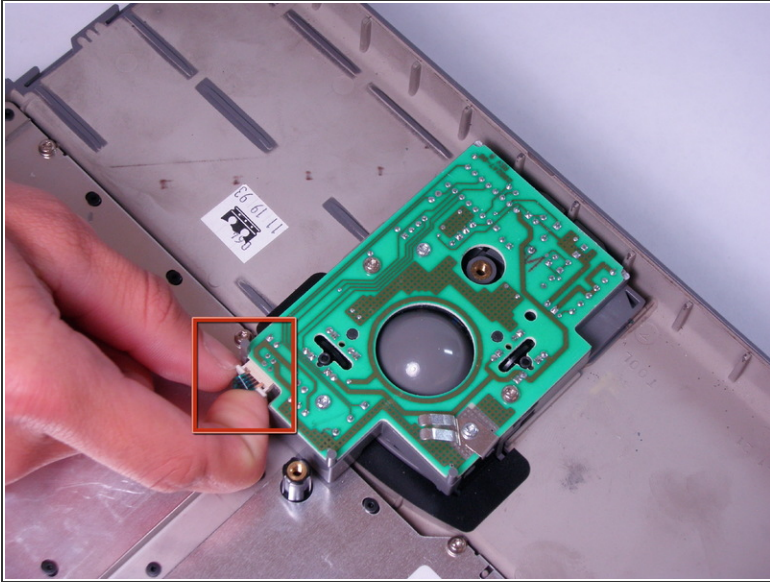


- Locate the trackball assembly. It is in the upper case and can be identified by a green circuit board.
- Open the white tab fastener by pulling out on each side. and remove the green and silver ribbon cable.
- Remove the green and silver ribbon cable by gently pulling it away from the opened tab fastener.

Step 11

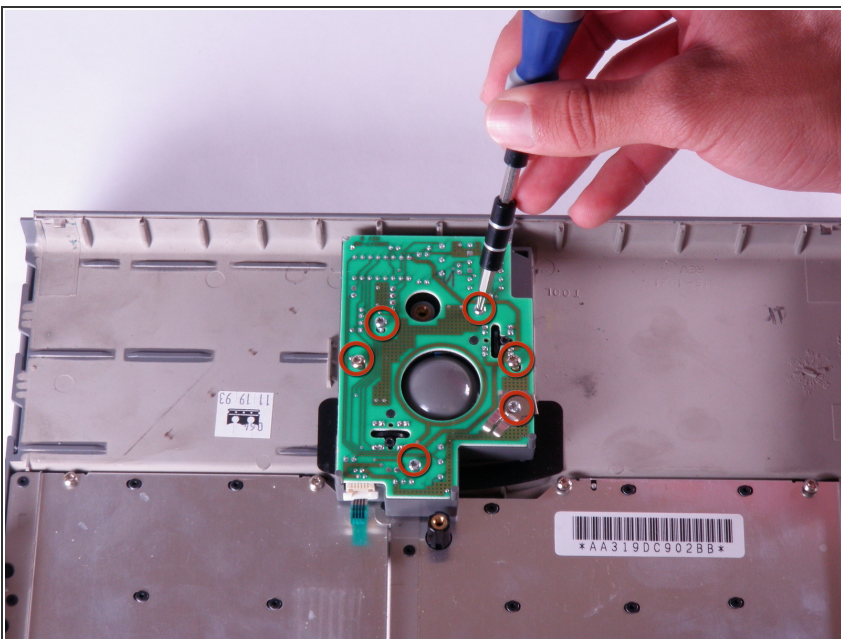



- Use a T8 torx screwdriver to remove the six, 6.8mm long screws from the top of the green circuit board.

Step 12

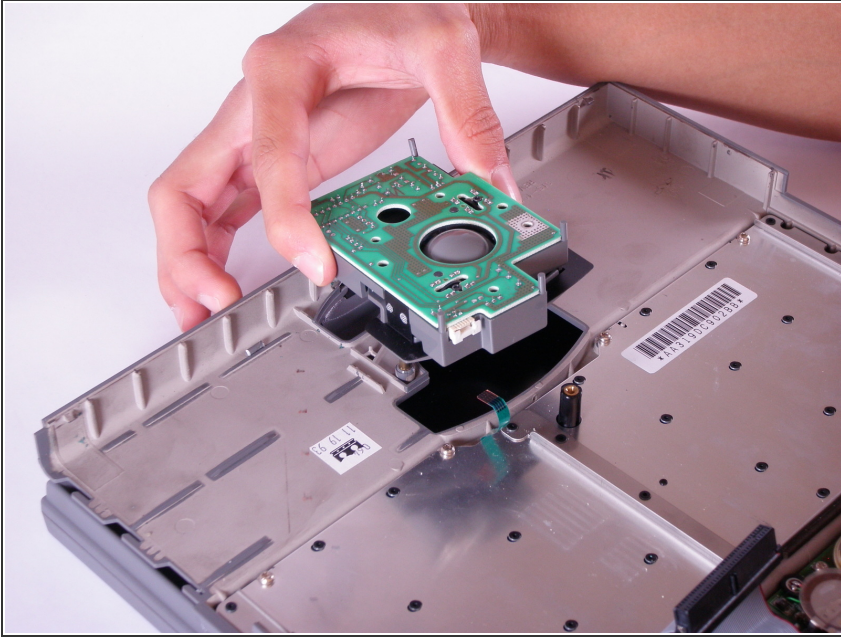



- Remove all four components of the trackball assembly by lifting upward.
- The four components of the trackball assembly should include: the green circuit board, a metal support, the track ball, and the casing.

Step 13 — Keyboard

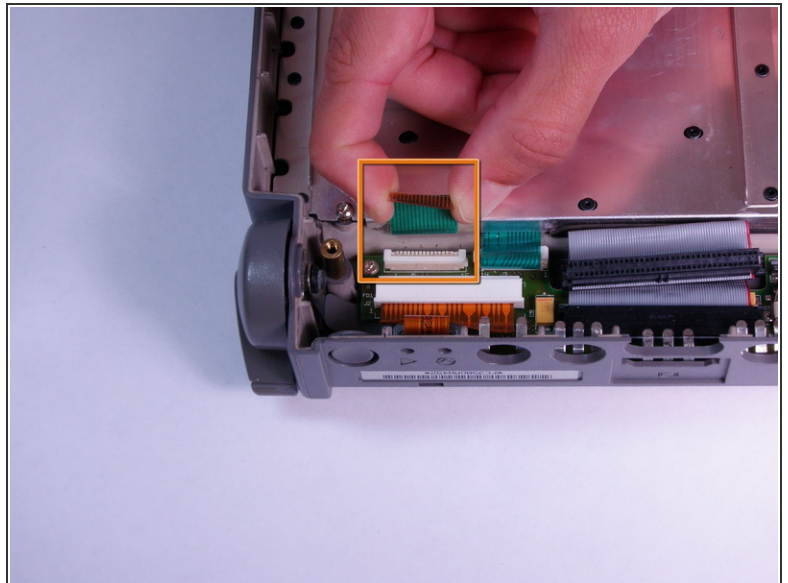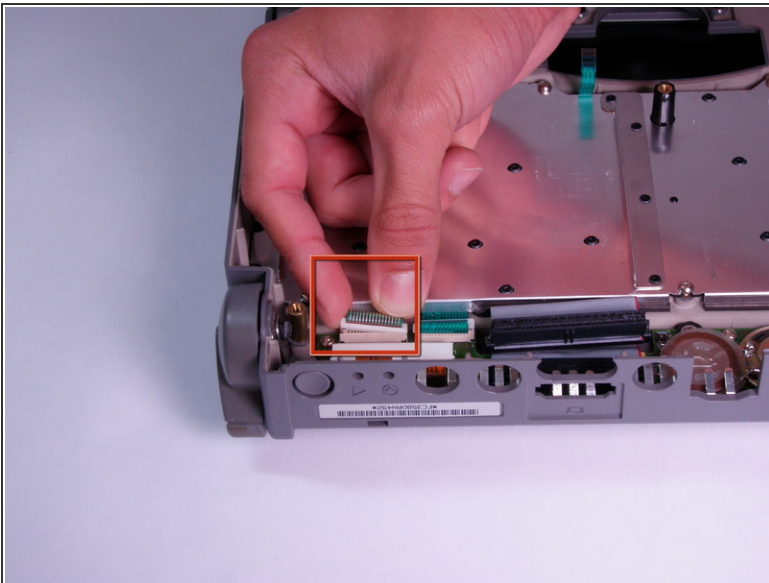


- Open the left most white tab fastener in the lower left corner by pulling up on each side.
- Remove the ribbon cable by gently pulling it away from the opened tab fastener.

Step 14

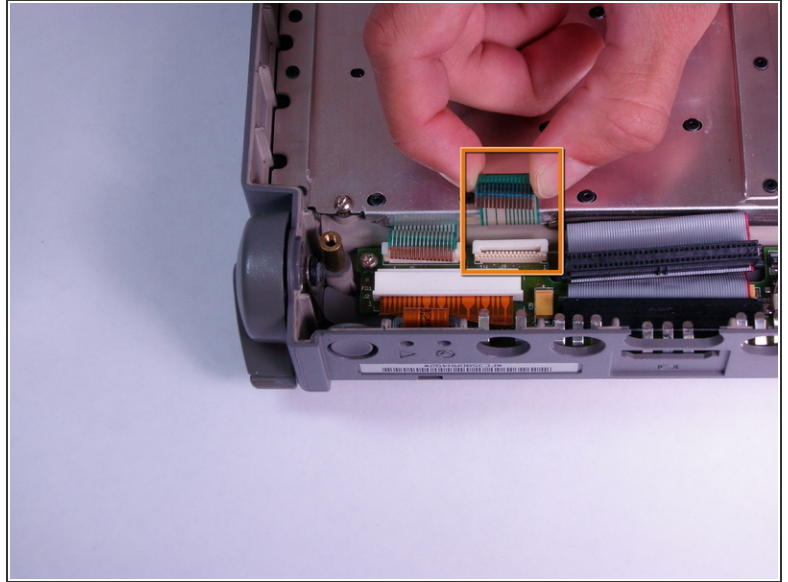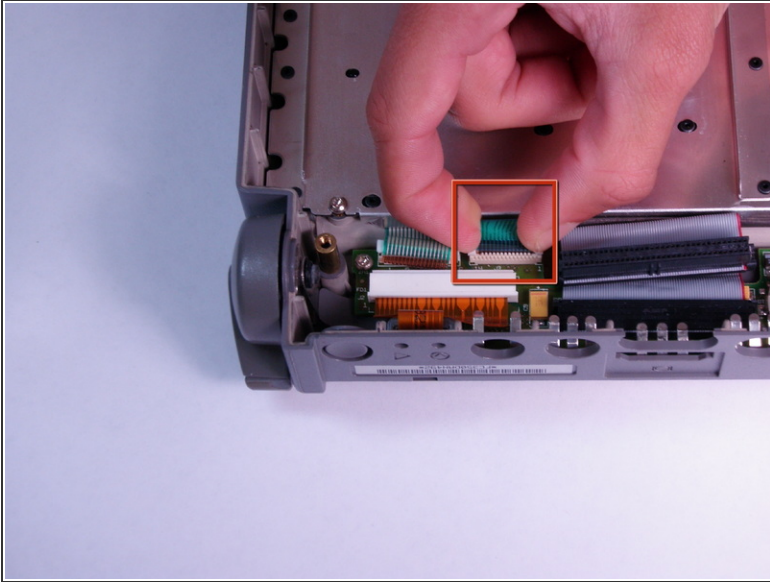


- Open the right of the two small, white tab fasteners by pulling up on both sides.
- Remove the green and silver ribbon cable from the tab fastener.

Step 15

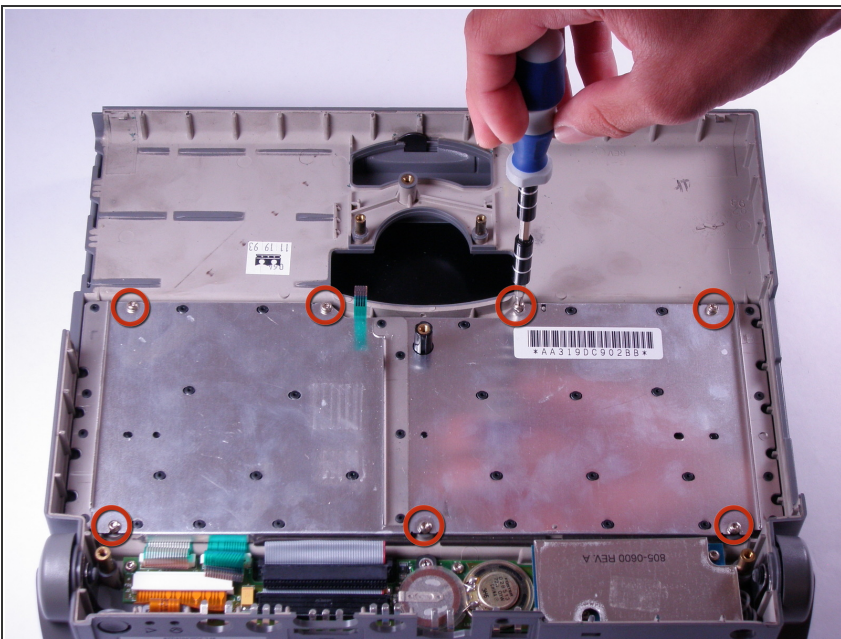

- Use a T8 torx screwdriver to remove the seven, 6.8mm long screws from the metallic panel.

Step 16

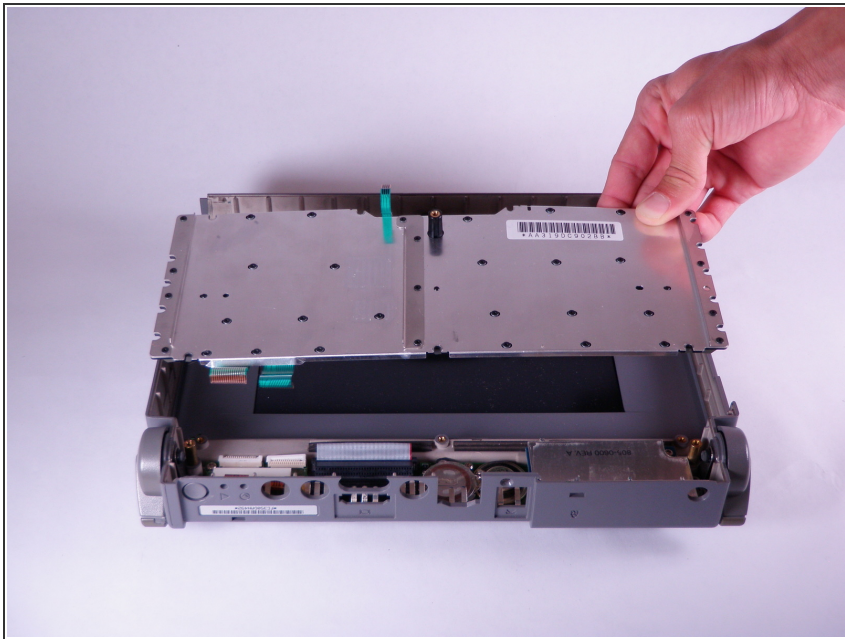

- Remove the keyboard by lifting it vertically away from the main body of the computer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 09:21:22 AM.